



Manual, Assembly instruction: Brodit 855854

Angled mount

1.)

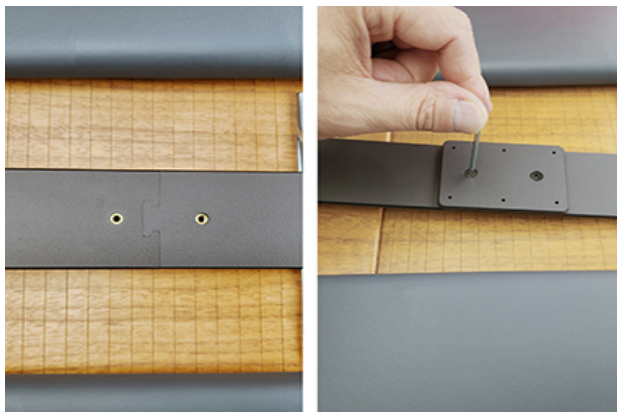

2.)

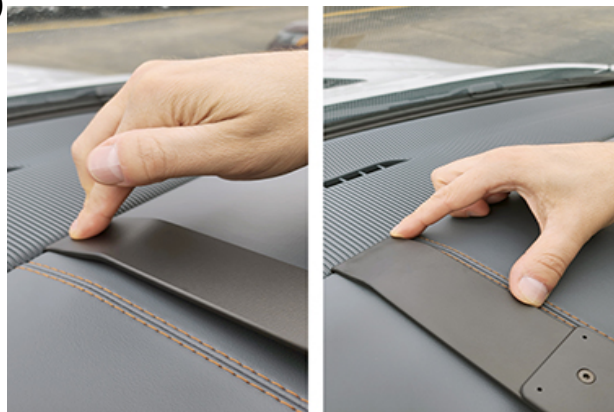

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Prepare the mount for installation: Place the front and back sections of the mount together. Use the included screws to attach the top plate and secure the sections together. Use the enclosed alcohol pad to gently clean the area where the mount will be installed. Peel off the adhesive tape covers on the ProClip.

2. Align the mount right of the leather stitching. Place the back edge of the mount in the seam between the leather and window grill. Slide the mount until it sits to the left of the stitching. Press down on the back of the mount to ensure the lip is fully inserted into the seam.

3. Using both hands, pull forward and down on the front of the mount and place the front lip into the seam between the leather and top dash trim. Press in on the front of the mount to ensure the lip is fully inserted into the seam.

4. The ProClip is in place.