


Manual, Assembly instruction: Brodit 855893

Angled mount

1.)

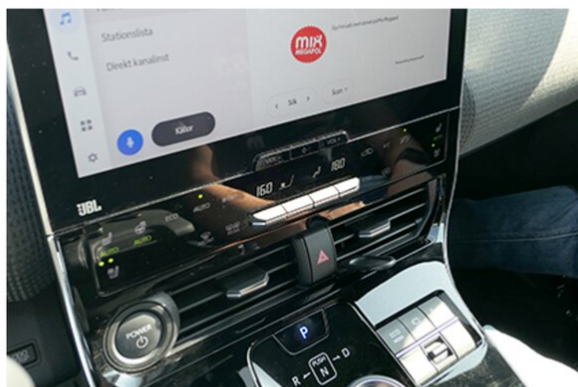

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. It is important to install the ProClip mount first: any holder + equipment is to be attached after the mount is in place.

1. Use the enclosed alcohol pad to clean the area where the mount will be placed. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the air vent housing and the center console, to widen the gap. Peel off the adhesive tape cover.

2. Press the angled lower edge of the mount into the gap next to the Gap Opener (Spaltöffner). Pull out the Gap Opener (Spaltöffner).

3. Press down on top of the mount. Press the mount forward and hook the upper angled edge into the gap between the air vent housing and the control panel. Press upward on the upper part so the angled edge goes all the way into the gap.

4. The ProClip is in place.