
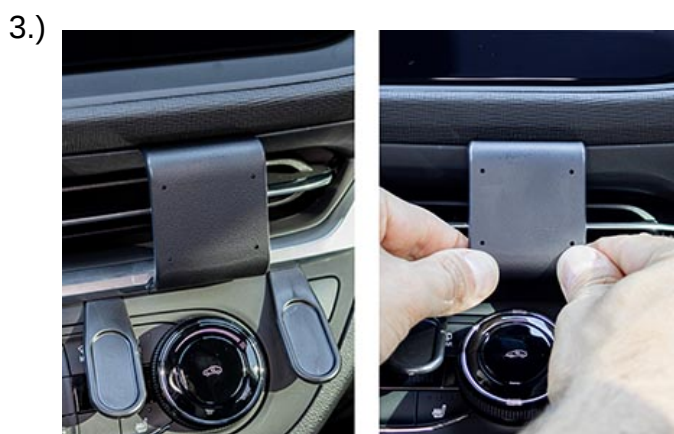


Manual, Assembly instruction: Brodit 855965

Center mount

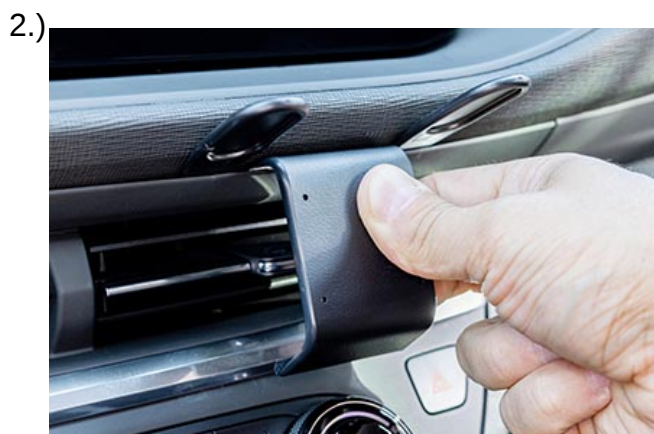

Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder & equipment is to be attached after the mount is in place.

1. Press the thin ends of the included gap openers into the gap between the frame surrounding the air vent and the dashboard, to widen the gap above the right air vent. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover.

2. Press the upper part of the mount into the gap between the gap openers. Pull out the gap openers.

3. Press the gap openers into the gap between the frame surrounding the air vent and the control panel, placed on each side of the mount. Pull the lower edge of the mount downward and hook/press the lower edge into the gap between the gap openers. Pull out the gap openers.

4. The ProClip mount is in place.