


Manual, Assembly instruction: Brodit 856020

Angled mount

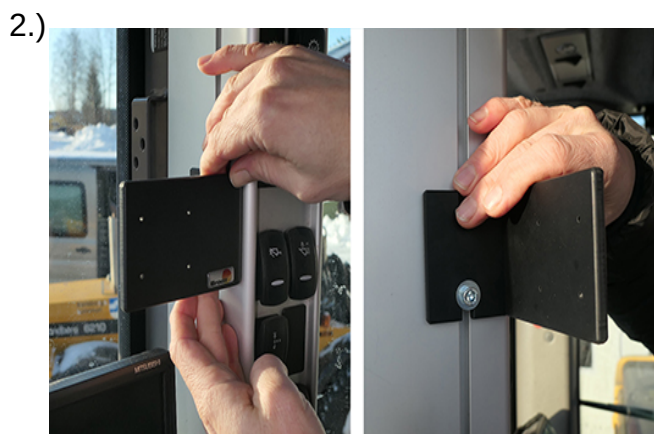

Please read all of the instructions and look at the pictures before attaching the ProClip. It is important to install the ProClip mount first: any holder & equipment is to be attached after the mount is in place.

1. Place a washer and a nut onto a screw. Hold the screw above the vertical groove in the post and insert/slide it downward into the groove so the nut will be inside and the washer outside the groove. Slide downward into the position where you want to install your device. Place the mount onto the post and slide it straight downward so the screw hooks all the way in the hole in opening in the mount,

2. Tighten the screw with the enclosed tool so the mount is held in place.

3. Place a washer and nut onto the other screw. Hold the screw above the vertical groove in the post and insert/slide it downward into the groove so the nut will be inside the groove and the washer outside the groove. Slide downward so the screw hooks all the way in the hole in opening in the mount. Tighten both screws so the mount is held firmly in place.

4. The ProClip is in place.