


Manual, Assembly instruction: Brodit 856024

Center mount

1.)



2.)

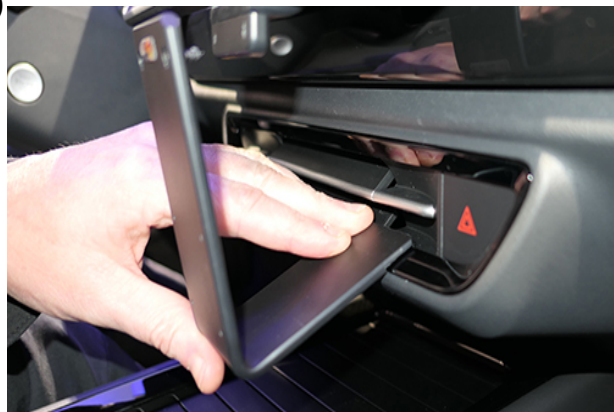

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. It is important to install the ProClip mount first: any holder & equipment is to be attached after the mount is in place. This mount consists of two parts. It is important to place the mount in the exact same position as shown in the pictures.

1. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover on the attaching part, the smaller part of the mount. Hold the attaching part directly to the left of the hazard light button. Press the thin edge into the gap between the center console and the supporting trim below it. Press the attaching part upward so the adhesive tape attaches under the center console.

2. Peel off the adhesive tape cover on the face plate part. Place the lower edge into the air vent housing so the grooved edge hooks over the surrounding frame. Press the upper part of the mount upward and forward so the holes match with the holes in the attaching part.

3. Screw the both parts together with the enclosed screws.

4. The ProClip is in place. This mount can be placed onto the left side of the air vent provided that the mounted device will not obstruct visibility or access.