


Manual, Assembly instruction: Brodit 856050

Center mount

1.)



2.)

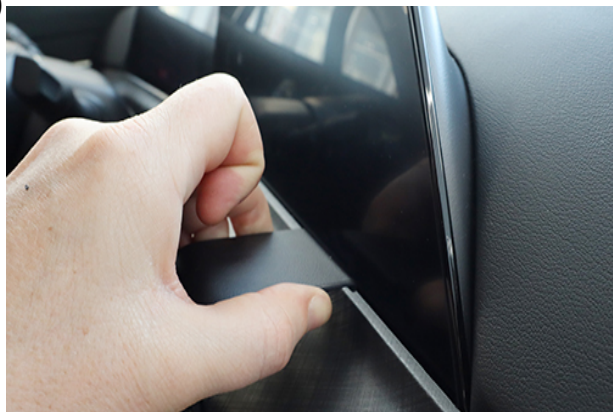

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder & equipment is to be attached after the mount is in place.

1. Press the angled edge on the lower part of the mount into the gap between the air vent frame and the dashboard.
2. Pull the upper part of the mount upward and press forward. Hook the angled upper edge over the trim by the screen.
3. Press downward on top of the mount so the angled edge hooks into place properly.
4. The ProClip mount is in place.