


Manual, Assembly instruction: Brodit 856071

Center mount

1.)

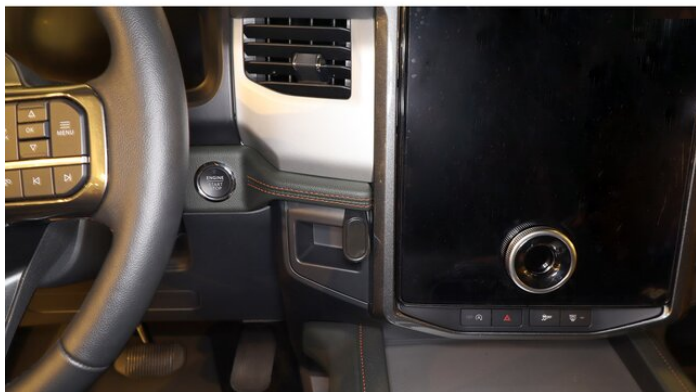


2.)



3.)



4.)

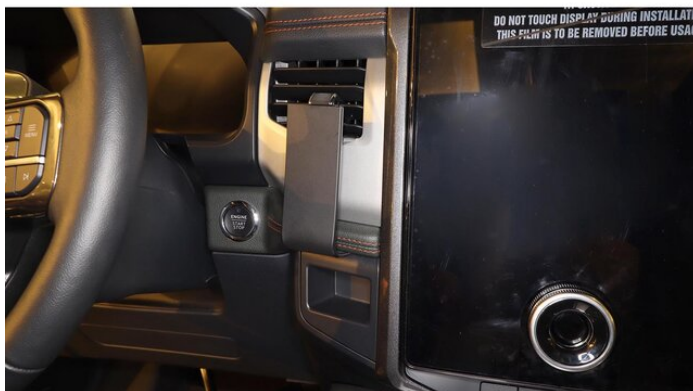

Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the frame surrounding the compartment and the dashboard, to widen the gap.
2. Press the lower edge of the mount into the gap next to the Gap Opener (Spaltöffner). Pull out the Gap Opener (Spaltöffner).
3. Press forward on the upper part of the mount. Hook the upper edge over the panel surrounding the air vent.
4. The ProClip mount is in place.