


Manual, Assembly instruction: Brodit 856080

Angled mount

1.)



2.)

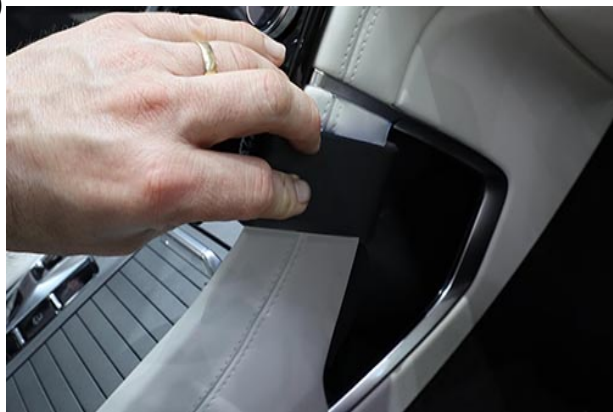

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder & equipment is to be attached after the mount is in place.

1. Place the mount over the center console frame. Hook the left edge of the mount over the frame.
2. Pull the right part of the mount away from the frame, in the same time press forward on the right side of the mount. Hook the angled right edge over the frame.
3. Press on the mount so it hooks in place properly.
4. The ProClip mount is in place.