


Manual, Assembly instruction: Brodit 856119

Center mount

1.)



2.)

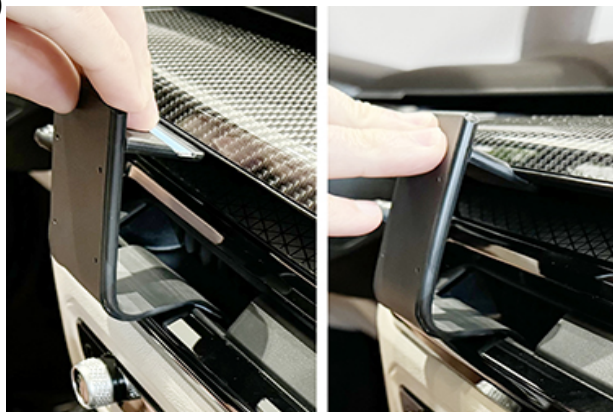

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder & equipment is to be attached after the mount is in place.

1. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Hook the angled edge on the lower part of the mount over the frame surrounding the air vent.

2. Press downward and forward on the upper part of the mount so the upper edge hooks under the frame surrounding the air vent.

3. This mount can be placed in any location within the width of the air vent provided that the device/equipment you wish to install will not interfere with the view of the screen or access of buttons.

4. The ProClip mount is in place.