


Manual, Assembly instruction: Brodit 856126

Center mount


1.)

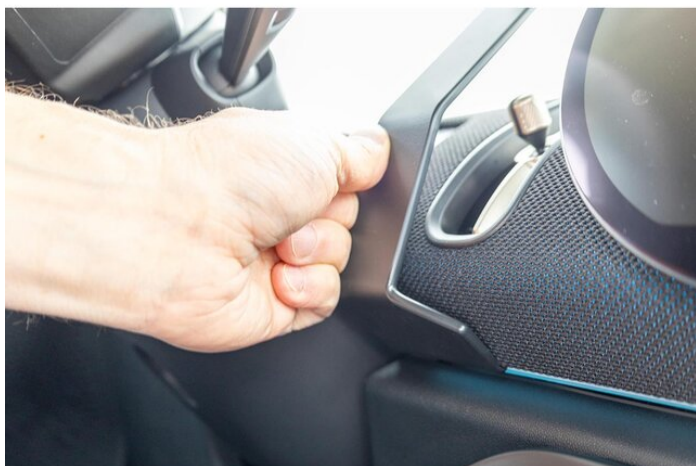

2.)



3.)

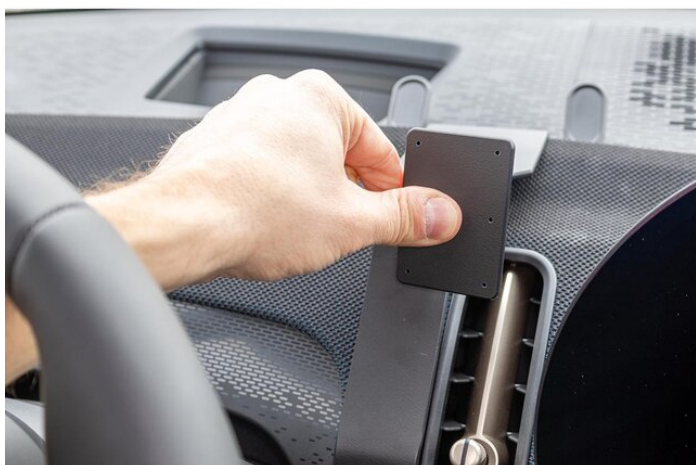

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Hook the lower edge of the mount under the dashboard panel, just by the steering column.
2. Align the mount along the left frame of the air vent. Press the thin end of the two included Gap Opener (Spaltöffner)s under the top of the dash panel on either side of the mount, to widen the gap.
3. Press forward on the upper part of the mount until the upper edge clips + snaps into the gap between the Gap Opener (Spaltöffner)s. Pull out the Gap Opener (Spaltöffner)s.
4. The ProClip mount is in place.