


Manual, Assembly instruction: Brodit 856139

Center mount

1.)



2.)

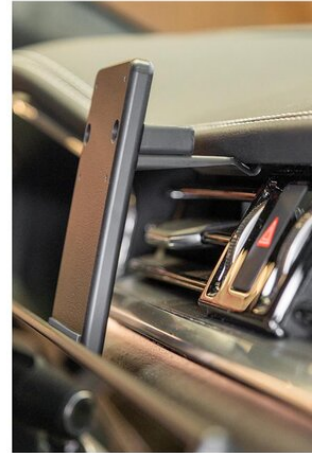

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place. This mount can be installed in any position within the width of the screen.

1. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Position the faceplate as desired along the top of the screen. Seat + Place the bottom of the mount behind the screen. Press against the back of the screen so the adhesive tape attaches properly.
2. Hook the upper edge of the mount under the edge of the dashboard top.
3. Screw the parts together using the included screws
4. The ProClip mount is in place. The mount can be installed as desired along the top of the screen.