

Manual, Assembly instruction: Brodit 856143

Angled mount

1.)




2.)



3.)



4.)

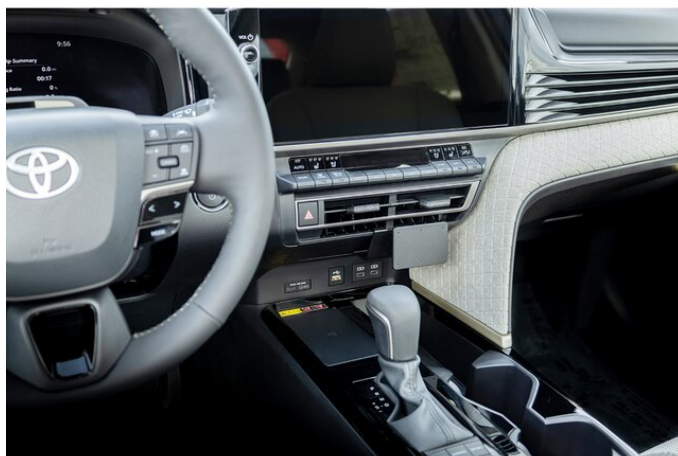

Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Place the upper edge of the mount centered on the bottom frame of the air vents.
2. Press the thin ends of the included Gap Opener (Spaltöffner)s into the gap in the center console, to widen the gap in either side of the mount.
3. Press forward on the face of the mount and upward on the lower edge until the lower edge geos into the gap between the Gap Opener (Spaltöffner)s. Pull out the Gap Opener (Spaltöffner)s.
4. The ProClip mount is in place.