

Manual, Assembly instruction: Brodit 856159

Angled mount

1.)




2.)



3.)



4.)

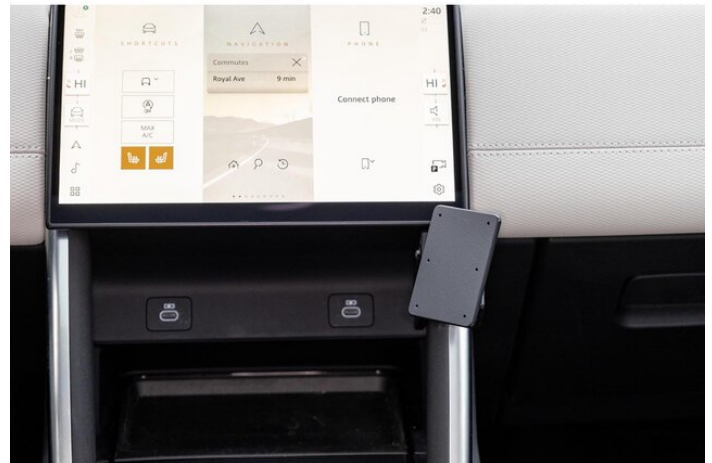

Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place. This mount consists of two parts.

1. Place each half of the mount around the right console pillar. Use the included Allen key to thread the screws on the left side of the mount. Do not tighten the screws yet.
2. Thread the screws on the right side of the mount. Do not tighten the screws yet.
3. Adjust the mount position up + down as desired. Tighten the screws so the mount sits firmly in place.
4. The ProClip mount is in place.