


Manual, Assembly instruction: Brodit 856191

Center mount Only for LX, LXS, EX models.

1.)

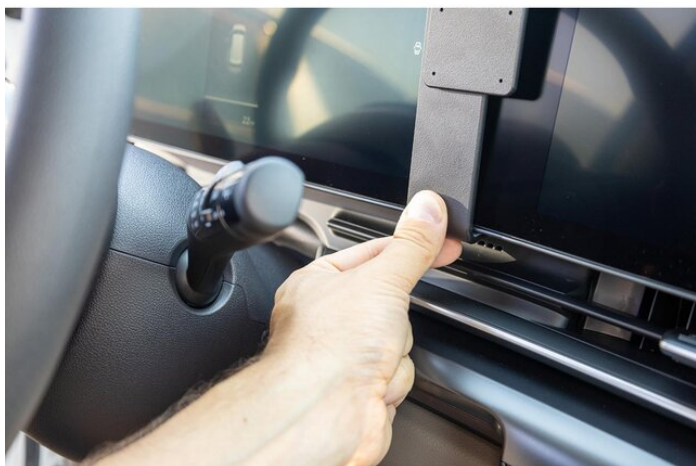

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Place the mount just left of the bend in the screen panel. Hook the lower edge under the screen frame.
2. Place the upper part of the mount on top of the screen so the plate edge matches the profile of the frame. Place tension on the mount and align the screw holes.
3. Secure the mount together with the included screws so it sits properly in place.
4. The ProClip mount is in place.