


## Manual, Assembly instruction: Brodit 856208

Center mount Only for Standard and Premium models with a 15,4" screen.

1.)

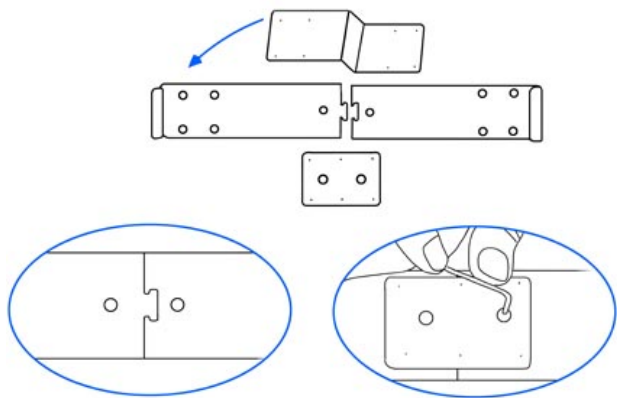

2.)



3.)



4.)



**Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder & equipment is to be attached after the mount is in place. This mount consists of four parts.**

**1.** Fit the sides of the mount together. Place the joining plate on the textured side of the mount and secure with the included screws.

**2.** Attach the mounting plate onto the left end of the mount with the included screws. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover.

**3.** Hold the mount over the screen so the mounting plate is on the drivers side. Slowly and firmly, press down on both sides of the mount to slide/hook it onto the screen. Gently flex the sides out to ease the installation. Press downward until the mount is securely in place.

**4.** The ProClip mount is in place.