


Manual, Assembly instruction: Brodit 856249

Center mount

1.)

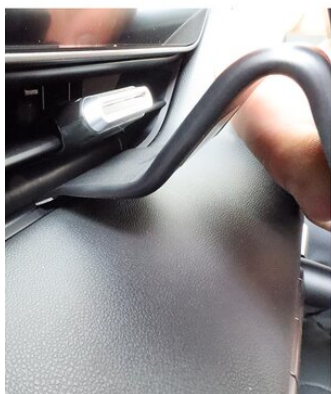

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Hook the angled upper edge of the mount into the gap between the air vent housing and the surrounding frame.
2. Pull the mount toward you and downward. Hook the angled lower edge under the padded dashboard.
3. The mount may be placed anywhere within the width of the air vents.
4. The ProClip mount is in place.