


Manual, Assembly instruction: Brodit 856250

Center mount

1.)

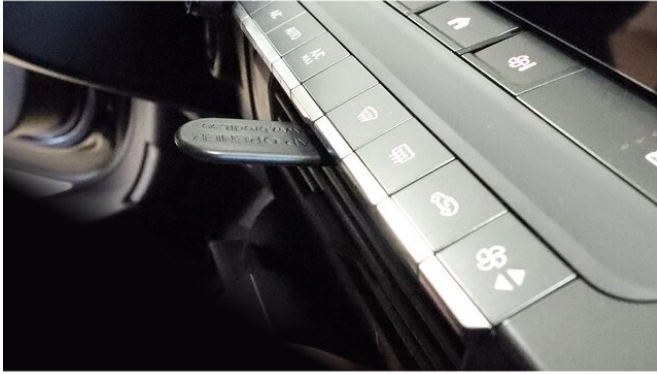

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the frame surrounding the air vent and the dashboard overhang. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover.

2. Hook the lower edge of the mount under the trim below the air vent.

3. Pull the upper part of the mount upward and press forward. Press the upper edge of the mount forward so it goes into the gap next to the Gap Opener (Spaltöffner). Press until you hear + feel it snaps into place. Pull out the Gap Opener (Spaltöffner).

4. The ProClip mount is in place.