


Manual, Assembly instruction: Brodit 856256

Center mount

1.)

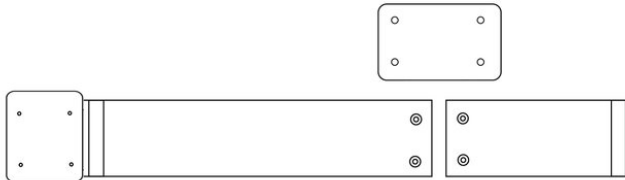

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place. This mount consists of three parts.

1. Fit the two sides of the mount together. Align the joining plate with the threaded inserts and secure the mount together using the included machine screws and wrench. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover.
2. Place the mount over the screen so the face plate is placed on the drivers side of the screen.
3. Flex the sides of the mount open and slide it downwards over the screen. Slide the mount down downward. Working the mount down one side at a time may ease installation.
4. The ProClip mount is in place.