


Manual, Assembly instruction: Brodit 856271

Center mount

1.)

2.)

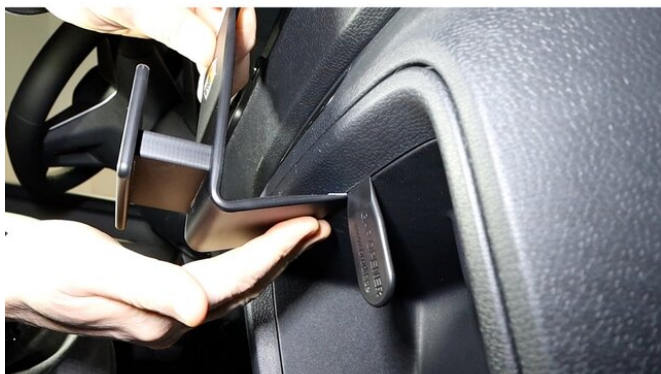

3.)

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the seam underneath the center console frame, to widen the gap. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Press the angled lower edge of the mount into the gap next to the Gap Opener (Spaltöffner). Pull out the Gap Opener (Spaltöffner).

2. Press the Gap Opener (Spaltöffner) into the gap between the air vent housing and the surrounding frame. Pull the upper part of the mount upward and hook the angled edge into the gap next to the Gap Opener (Spaltöffner).

3. Press the angled edge all the way into the gap. Pull out the Gap Opener (Spaltöffner).

4. The ProClip mount is in place.