

Manual, Assembly instruction: Brodit 856279

Angled mount


1.)

2.)



3.)

4.)

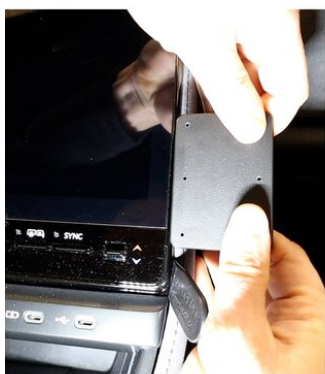

Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the center console frame and the sidewall, to widen the gap.
2. Hook the lower edge of the mount into the gap next to the Gap Opener (Spaltöffner). Press the edge all the way into the gap. Pull out the Gap Opener (Spaltöffner).
3. Press the Gap Opener (Spaltöffner) into the gap between the screen and the console frame. Pull the upper part of the mount upward and hook the angled edge into the gap next to the gap opener. Press down in top of the mount so it sits properly in the gap. Pull out the Gap Opener (Spaltöffner).
4. The ProClip mount is in place.