


Manual, Assembly instruction: Brodit 856280

Center mount


1.)



2.)

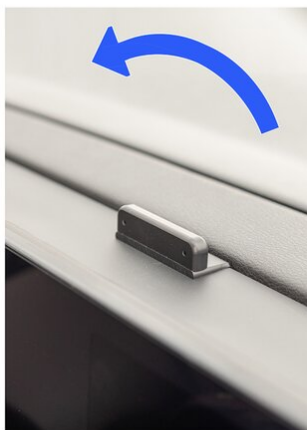

3.)

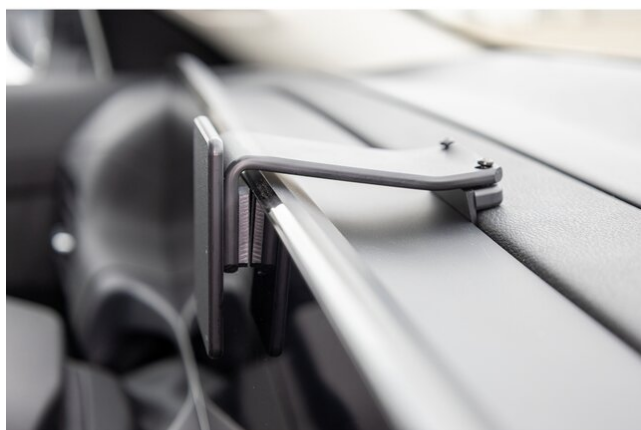

4.)



Please read all instructions and review the pictures before installing the ProClip mount. Important: The mount must be installed before attaching any device holder, cradle, or other accessory. This mount consists of two parts: An attaching part and a faceplate.

1. Clean the installation area using the enclosed alcohol wipe. Remove the protective liner from the double-sided adhesive tape. Press the edge of the attaching part into the first gap on top of the dashboard behind the screen. Pull the attaching piece toward you. At the same time, press it down and rotate it until it hooks under the dashboard top panel.

2. Position the faceplate so the holes align. Install the included screws, leaving the parts loosely held together.

3. Pull the mount away from the screen so it flexes. Position it so the block behind the faceplate is placed just below the frame of the screen. Fully tighten the screws to secure the mount in place.

4. The ProClip mount is in place.