

Manual, Assembly instruction: Brodit 856294

Angled mount

1.)




2.)



3.)



4.)

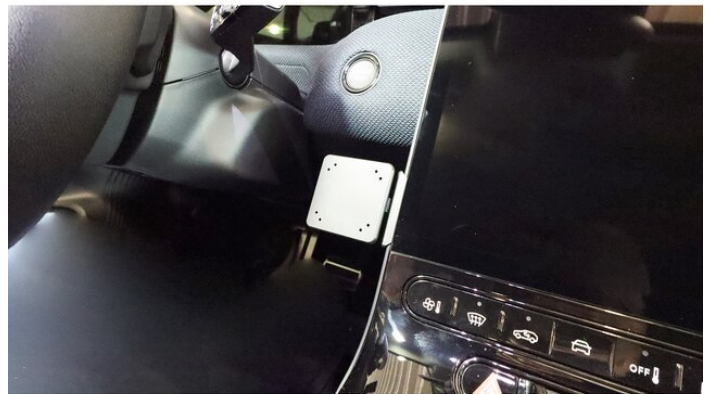

Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Place the mount behind the screen in the center console. Hook the angled right edge around the frame surrounding the screen.
2. Pull the left part of the mount toward you. Hook the angled edge around the frame surrounding the screen.
3. The mount can also be placed on the passengers side of the screen.
4. The ProClip mount is in place.