


Manual, Assembly instruction: Brodit 216337

Adjustable holder. Fits devices with or without skin/case, with height 125-140 mm, max thickness 10-17 mm.

1.)



2.)

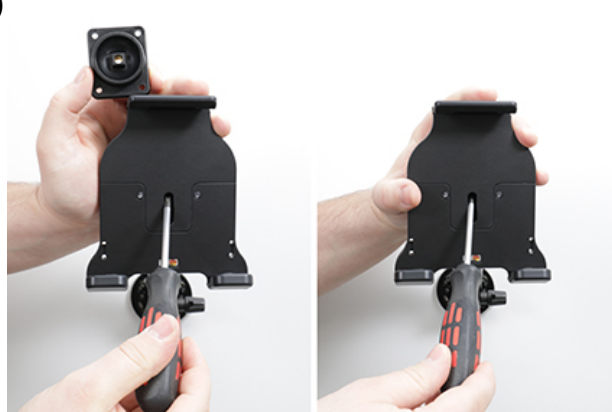

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the holder.

1. To adjust the holder for your device: Place the device IN the holder. Press down **HARD** on the top of the holder. Slide the device sideways out of the holder. Tighten the screws with the short end of the Allen key.

2. Loosen the screw in the middle of the holder so you can remove the mounting plate on the back. Place the mounting plate in the desired location. Secure the mounting plate with the supplied screws. Place the holder over the mounting plate so that the screw fits into the hole. Tighten the screw until the holder is firmly in place but can still be angled.

3. To insert the device into the holder: Place the lower part of the device into the holder and press forward on the upper part of the device so that it snaps into the holder. To remove the device from the holder: Press upwards on the upper part of the holder and pull the upper part of the device out of the holder first, then you can lift the device up/out of the holder.

4. The holder fully assembled.