


Manual, Assembly instruction: Brodit 711402

Fits devices with Protective Boot (EDA10A-RB-0) and with Rotating Hand Strap (EDA10A-HS-1PK). With AMPS, VESA 75 holes.

1.)

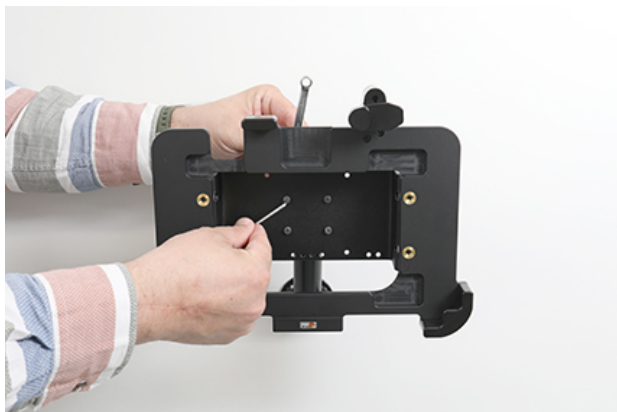

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the holder.

1. Place the holder onto the desired position and screw into place with the enclosed screws.

2. To place the device in the holder: Press the spring stud locking upward. Place the lower part of the device in the holder, then flip/press the upper part forwards so it snaps into place in the holder. Press the spring stud locking downward.

3. To remove the device from the holder: Press the spring stud locking upward. Press upwards on the upper part of the holder, in the same time pull the upper part of the device out from the holder and then lift the device up and out from the holder.

4. The holder is in place.