


Manual, Assembly instruction: **Brodit 215696**

Adjustable top support for a firmer grip. Fits for holders with tilt swivel.


1.)



2.)

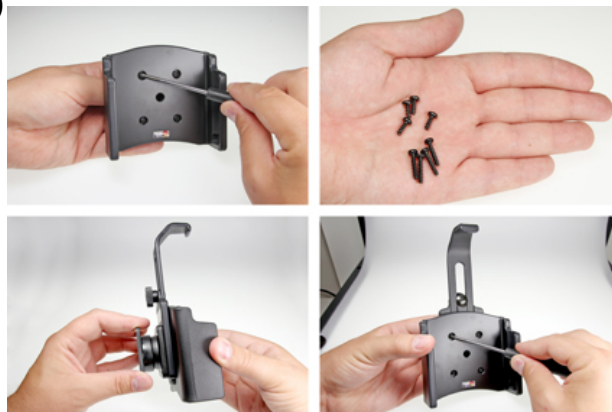

3.)

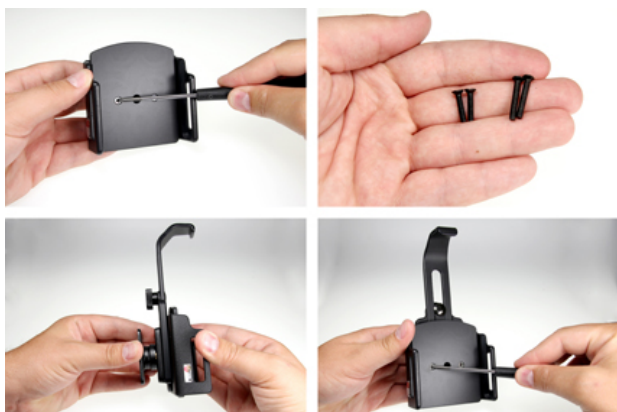

4.)



Please read all of the instructions and look at the pictures before installing. This product fits for holders with tilt swivel (does NOT fit for adjustable holders that are equipped with adjustment screws on the back) Please read all of the instructions and look at the pictures before installing. This product fits for holders with tilt swivel (does NOT fit for adjustable holders that are equipped with adjustment screws on the back) The pictures show different types of holders, the installation procedure is done the same way for all holder types: Remove the screws in the holder (NOT the center screw). The screws are to be replaced with similar enclosed longer screws. Remove the tilt swivel from the holder. Place the top support between the holder and the tilt swivel so the adjustment screw is on the back and the holes fit. Place the enclosed long screws in the holes and screw the holder onto the tilt swivel so the top support is locked into place.

1. Installation onto holder with small tilt swivel (oval attaching plate).

2. Installation onto holder with large tilt swivel.

3. Installation onto adjustable holder.

4. To place the device in the holder: Slide the device into the holder from above. Press the top support downward and lock into position by using the adjustment screw on the back. To remove the device from the holder: Release the top support by using the adjustment screw on the back. Press the top support all the way up. Lift the device upward and out of the holder. The adjustable top support in place in holder.