

Manual, Assembly instruction: Brodit 514436

Adjustable Holder. Fits devices with skin that has the following dimensions: Width: 62-77 mm, Thickness: 6-10 mm. For use with Apple original Lightning to USB Cable.


1.)



2.)



3.)

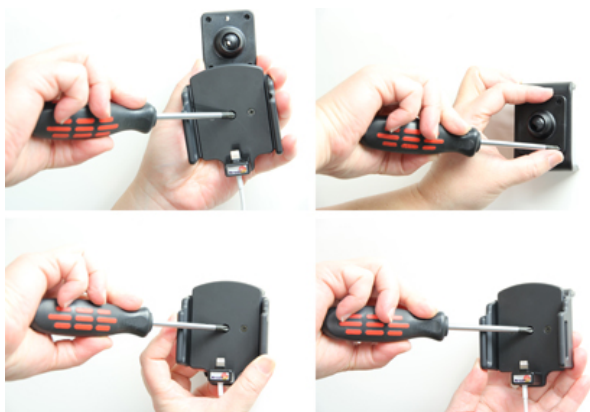

4.)



Please read all of the instructions and look at the pictures before attaching the holder.

1. To adjust the holder for your device: Loosen the screws on the front side of the holder, so the sides of the holders can be adjusted. Place the device in the holder and press the sides together so the device is firmly in place. Tighten the screws on the front side of the holder.

2. Place the connector of the cable in the hole in the lower part of the holder. Carefully press the connector downward and forward so it passes the locking and goes into the hole. Press until you hear/feel the connector snap into place in the holder.

3. Loosen the screw in the center of the holder so you can remove the tilt swivel attaching plate on the back. Place the attaching plate onto the desired position. Screw the attaching plate into place with the enclosed screws. Place the holder over the attaching plate so the screw fits in the hole in the tilt swivel. Screw a few turns on the screw, just so the thread starts to pull. Pull the holder toward you and hold it slightly tensed, in the same time tighten the screw so the holder is pulled toward the tilt swivel. Tighten the screw firm at first, then loosen it a bit so the holder is firmly in place, but still can be adjusted. NOTE! It is important to slide the device STRAIGHT DOWNWARD into the holder, and to slide it STRAIGHT UPWARD out of the holder.

4. The holder is in place.