


Manual, Assembly instruction: Brodit 741003

Passiv holder with tilt swivel. Fits for devices with original skin. With spring stud locking.

1.)

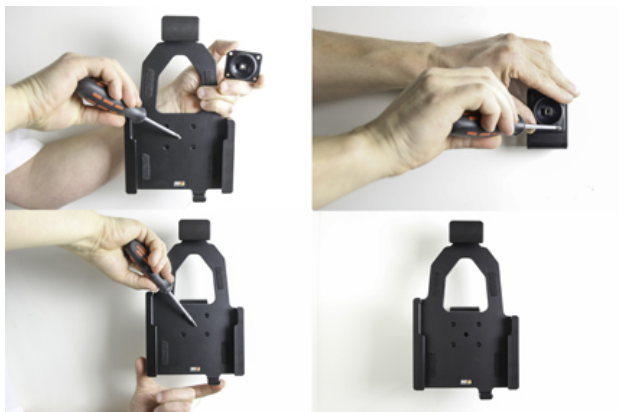

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the holder.

1. Loosen the screw in the center of the holder so you can remove the tilt swivel attaching plate on the back. Place the attaching plate onto the desired position. Screw the attaching plate into place with the enclosed screws. Place the holder over the attaching plate so the screw fits in the hole in the tilt swivel. Tighten the screw until the holder is firmly in place, but still can be adjusted.

2. To place the device in the holder: Place the lower part of the device into the holder where the opening between the sidewalls is widest. Flip the upper part of the device forward so the device goes flat into the holder. Slide the device straight downward into the holder. Press the block with the spring stud locking downward onto the upper part of the holder so it snaps into place.

3. To remove the device from the holder: Press the block upward away from the holder. Press the device straight upward so the lower part reaches the widest part of the opening between the sidewalls. Flip the upper part of the device away from the holder and lift the device out from the holder.

4. The holder is in place.