


Manual, Assembly instruction: Brodit 856219

Center mount

1.)

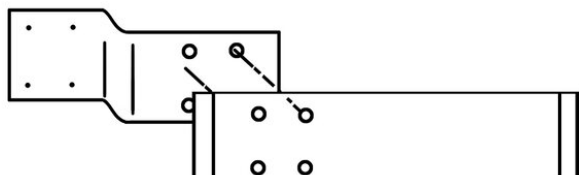

2.)



3.)

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place. This mount consists of two parts: a mount and a face plate.

1. Attach the face plate onto the mount and attach it with the enclosed screws. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover.

2. Hold the mount over the screen so the mounting plate is on the drivers side of the screen.

3. Slowly and firmly, press down on both sides of the mount to slide + hook it onto the screen. Gently flex the sides out to ease the installation and press downwards alternately on the left + right side. Press downward until the mount is securely in place.

4. The ProClip mount is in place.