


Manual, Assembly instruction: Brodit 856268

Center mount

1.)



2.)

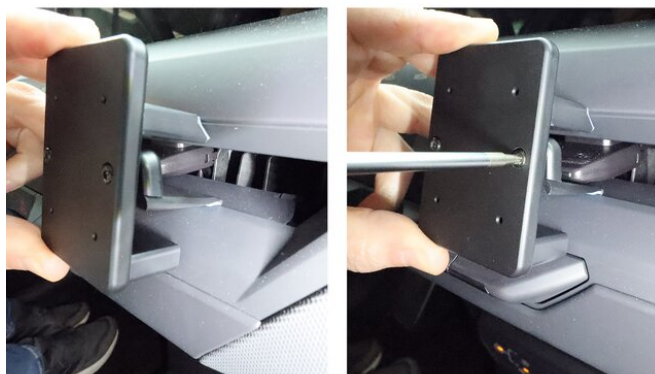

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place. This mount consists of two parts: A mount and a mounting plate.

1.Place the mount behind the mounting plate as shown in the picture and loosely fasten them together using the included screws. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover.

2. Hook the angled edge of the mount onto the frame surrounding the air vent. Carefully tighten the screws in the mounting plate until you feel the mount sits firmly in place.

3. The mount can be placed anywhere within the width of the air vent.

4. The ProClip mount is in place.